

TOSHIBA

Colour TV

1400RS

Welcome to the bright new world of Toshiba colour. Your new precision built colour television has been designed and engineered by one of the world's largest manufacturers of I.C.s, transistors and diodes to give you an extremely reliable and natural performance. Please read this manual and retain for future reference.

INSTALLATION

For Your Safety

This receiver must only be connected to a mains supply of 220 V 50 Hz. Do not connect to a D.C. mains.

Where to Position Your Receiver

Choose a position where direct light from a lamp or window does not fall on the screen. Wherever possible out of the reach of young children.

 
Make sure that there is adequate air circulation through the vents on the rear cover of the receiver. Do not place the receiver close to curtains or in an enclosed shelf space.

Choosing an Aerial


Optimum reception of colour requires a good signal and will generally mean that a loft or outdoor aerial must be used. The exact type and siting will depend upon your particular area and your local aerial installers will be best to advise. Where signals permit, a set top aerial may be used by plugging into the aerial socket and rotating to obtain the best picture.

The Remote Control

Carefully slide back cover and insert 2 batteries, taking care to observe correct polarities.
Suitable battery types are: R6 or AA or SUM-3.

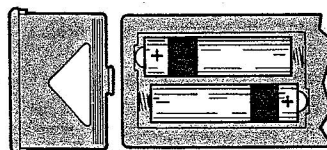

ADJUSTING YOUR SET

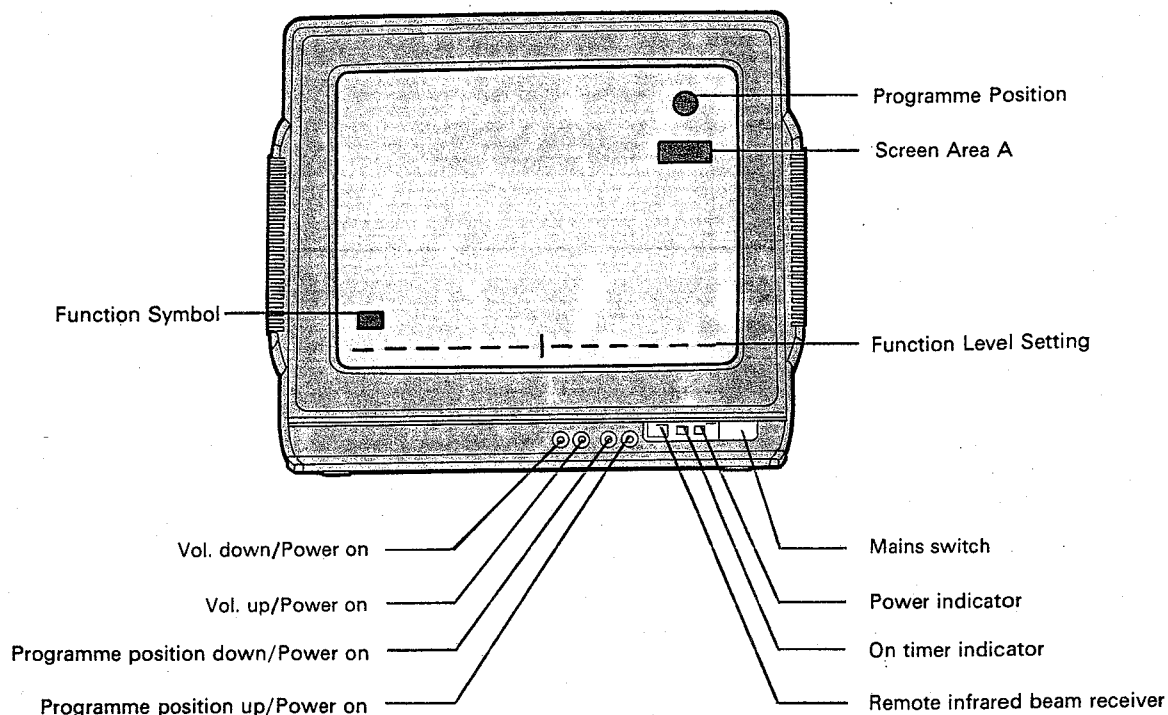 

Tuning In

1. Connect your aerial to the socket at the rear of the set and insert the mains plug into a mains socket.
2. Press the mains switch button ① and a red light will glow. If a picture does not appear after several seconds, press the button ② on the remote control, or any of the four 'power on' buttons on the front of the receiver.
- 3a. **To Tune in all Channels Automatically**
 - i. Press ▲ (P) ▼ buttons on the receiver or 0 ~ 39 ▲ ▼ buttons on the remote control until programme position 1 is selected.
 - ii. Press the □ button on the remote control repeatedly until the letter ASM appears in screen area A. Then while this display is present, press either the adjacent + or - buttons. The set will now search through the complete frequency range in ascending order.
- 3b. **To Tune into any desired programme position**
 - i. Press ▲ (P) ▼ buttons on the receiver or 0 ~ 39 ▲ ▼ buttons on the remote control to select required programme position.
 - ii. Press the □ button on the hand held unit repeatedly until the symbol >>> appears in screen area A and while this symbol is present, press either adjacent + button for VHF search or - button for UHF search. The set will begin to search and will stop at the first signal encountered. If this is not a wanted signal, while the symbol >>> is present press adjacent + or - buttons. If the symbol is seen to slowly pulse, the search has reached a band end and may be re-started by pressing + or -.
 - iii. Repeat sections 3b i. and ii. until all channels are memorised.
 - iv. Fine tuning may be achieved by repeatedly pressing the button □ on the hand held unit until the ■■■ symbol appears in screen area A, and whilst this display is present, press adjacent + or - buttons to optimise the picture.

Sound and Picture Controls

To adjust colour ④, **contrast** ⑤ and **brightness** ⑥

1. Press button ④ ⑤ ⑥ on the hand held unit repeatedly until the appropriate function symbol appears on the screen.
2. Adjust level by means of adjacent + or - buttons.

To Adjust Volume

 
Press ▲ ▼ buttons on the front of the receiver or on the hand held unit to select required level. Function and level setting will be displayed.

If, when viewing transmissions, loss of sound is experienced, with the volume settings at a suitable level, the correct sound select position (S1 or S2) needs to be selected in the following manner:- Press the □ button repeatedly until the letters ASM appear in screen area A. Then while this on screen display is present, press adjacent - button repeatedly to select either S1 or S2 position.

Note: This set has an automatic 'No signal switch-off' facility, and will switch itself off if the following procedure is applied:

Press the four buttons (P) ▲ ▼ and ▲ ▼ on the front of the receiver simultaneously, the word ON or OFF will be displayed on screen. If the word OFF is displayed, then this facility will not operate, however if ON is displayed then the set will turn itself off approximately 15 minutes after the transmitter closes down. Selection between the word ON and OFF is possible by repeatedly pressing the four (P) ▲ ▼ and ▲ ▼ buttons on the front of the set.

REMOTE CONTROL OPERATION FOR NORMAL PICTURE

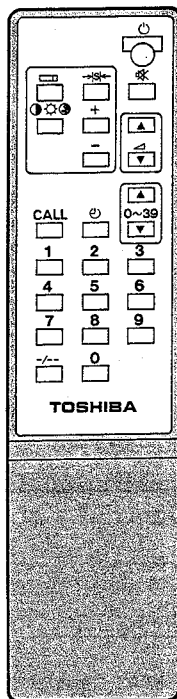

Using the Controls

Operate the control by pointing it toward the infra-red receiver on the set, using the buttons as follows:-

(Standby on/off)

Use standby to turn the set off for short periods of time.

-/--, 0 ~ 9 (Programme Selection)

To select programme 8 press -/-- until - appears in screen area A then press button 8. To select programme 38, press -/-- until two -- appear in screen area A, then press 3 followed by 8.

0 ~ 39 (Programme Selection)

Hold 0 ~ 39 or buttons to sequentially raise or lower the programme position. Programme number is briefly displayed.

(Volume Adjustment)

Hold or buttons to raise or lower volume. Function and setting is briefly displayed.

and +/- (contrast, brilliance, colour adjustment)

Press the button repeatedly until the required function appears on the screen and press and hold the adjacent + or - buttons to raise or lower the setting. Function and setting is briefly displayed.

(Sound mute)

Press once to mute sound and again to return sound.

Call

Press to retain channel display, and again to cancel channel display.

(Selectable Picture)

Operation of this button selects 3 levels of preset picture contrast adjustment to suit individual taste, levels selected are indicated by the numbers , or in the function setting display.

(On/off timer)

Press button and the following will be displayed on screen:-

OFF 00 : 00

If the set is required to revert to the standby mode after a given period of time for example 20 minutes, press the buttons 00 20 on the hand held unit, your selected time will appear on the screen, and the set will switch to the standby condition after this period has expired.

 
Return the set to the on position by pressing button on the hand held unit, if the button is pressed twice, then the following will be displayed on screen:-

P00 ON 00 : 00

If required, the set can now be programmed to switch itself on after a given period of time on a certain programme position. For example if the set is required to be on in 20 minutes time on programme position 2 then press the following buttons on the hand held unit:- 02 (for programme position 2), then 00 20 (for 20 minutes).

N.B. The set must be left in the standby mode after programming on time. A yellow light on the front of the receiver will illuminate when an on time has been programmed and will remain on while the set is in the standby mode.

CONNECTING OTHER EQUIPMENT

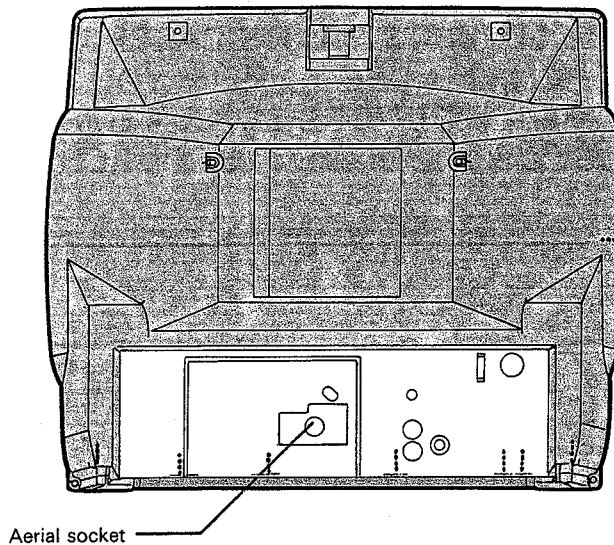

Socket	Socket Type	Function
Aerial	75 ohm standard coaxial	Normal TV reception. R.F. input from VCR

SPECIFICATIONS

Television system and channel coverage
Picture Tube
Sound Output
Dimensions
Supplied Accessories
Weight
Power Consumption



Pal B/G Secam VHF: 2-4, 5-12, S1-S20 UHF: 21-69
34 cm 90 degree deflection
1,5 W rms
391 mm wide, 337 mm high, 382 mm deep
1* Remote Control, 2*R6 Batteries
8.9 kg
49 W

A SELF HELP GUIDE FOR SIMPLE PROBLEM SOLVING


Patches of Colouration

Switch off at the mains for 15 minutes.

No Picture or Sound

Check mains switches are on, press  and . Plug into a known working mains socket. 'No signal off' facility has operated.

 
 
Poor or no Picture

Try a different TV station, press , check your aerial and connections. Adjust fine tuning.

Double Images/Ghosting/Garbled Text

Check your aerial, a more directional type might be needed for your area. Adjust fine tuning.

Good Picture but no Sound

Press  +, press .

Blue Screen

Set senses no signal condition, check aerial connection, switch to a transmitting signal.

SOME DO'S AND DON'TS ON THE SAFE USE OF EQUIPMENT

PLEASE READ THE FOLLOWING POINTS CAREFULLY. THEY ARE OF A GENERAL NATURE, INTENDED TO HELP YOU WITH ALL YOUR ELECTRONIC CONSUMER PRODUCTS. SOME ITEMS MAY NOT APPLY TO THE GOODS YOU HAVE JUST PURCHASED.

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections including the mains plug, extension leads and inter connections between pieces of equipment are properly made and in accordance with the manufacturer's instructions. Switch off and withdraw the mains plug when making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DO be careful with glass panels or doors on equipment.

DON'T continue to operate the equipment if you are in any doubt about it working normally, or it is damaged in any way – switch off, withdraw the mains plug and consult your dealer.

DON'T remove any fixed cover as this may expose dangerous voltages.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation or has a standby mode. Switch off using the switch on the equipment and make sure your family know how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety. It is illegal to watch television whilst driving.

DON'T listen to headphones at high volume, as such use can permanently damage your hearing.

DON'T obstruct the ventilation of the equipment for example with curtains or soft furnishings. Overheating will cause damage and shorten the life of the equipment.

DON'T use makeshift stands and NEVER fix legs with wood screws – to ensure complete safety always fit the manufacturer's approved stand or legs with the fixing provided according to the instructions.

DON'T allow electrical equipment to be exposed to rain or moisture.

ABOVE ALL

- NEVER let anyone, especially children, push anything into holes, slots or any other openings in the case – this could result in a fatal electric shock.
- NEVER guess or take chances with electrical equipment of any kind – it is better to be safe than sorry!

PROGRAMME IDENTIFICATION

You may wish to log your programme/station selection as follows:

0		14		28	
1		15		29	
2		16		30	
3		17		31	
4		18		32	
5		19		33	
6		20		34	
7		21		35	
8		22		36	
9		23		37	
10		24		38	
11		25		39	
12		26			
13		27			

TOSHIBA CONSUMER PRODUCTS (UK) LIMITED

NORTHOLT AVENUE, ERNESETTLE, PLYMOUTH, DEVON PL5 2TS, ENGLAND

2399 4956

PRINTED BY PENWELL PRINT LTD, CALLINGTON, CORNWALL, U.K.